

End Cap

End Caps are used to transition from laminate to carpet, masonry (fireplaces), sliding doors and other exterior door jambs.

T-Molding

T-Moldings are commonly used in doorways to join two laminate floors in adjoining rooms. Also recommended when making a transition from laminate floor to another floor that is approximately the same height.

Reducer

Reducers are used to transition from laminate floors to floors of different heights with a minimum height difference of 1/4" (6.35mm).

Quarter Round

Quarter Rounds are used to conceal the required expansion space between the wall and the laminate flooring.

Base Shoe








Base Shoes, like Quarter Rounds, are used to conceal the required expansion space between the wall and the laminate flooring.

Wall Base

Base moldings conceal the joint between an interior wall and the floor. Also used to protect the walls from scuffs and floor cleaning tools.

Colonial Base

Colonial Base molding conceals the joint between an interior wall and the floor. Also used to protect the walls from scuffs and floor cleaning tools.

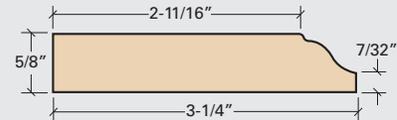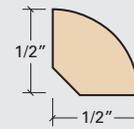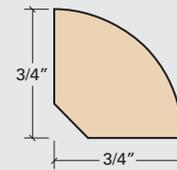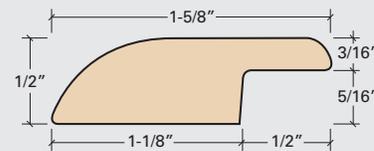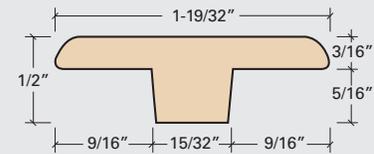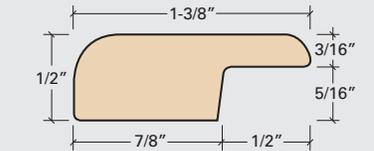

Core Material: Polyurethane Composite Material

All Moldings Are 94" Long

HOW TO INSTALL

USE: VersaFlex moldings are designed for interior and exterior use. This product is stable and will not absorb moisture. However, the use of a paint or gel stain and sealer is recommended for all applications.

MACHINING: Conventional woodworking tools can be used with this material. Material can be cut, sanded and shaped with ease. Miter saws work well when trimming this material. As with all types of trim material, use care when marking and cutting.

CONDITIONING: Conditioning Versaflex in a warm room (70 to 75°) for 1/2 a day will make it more flexible.

FASTENING: Always install VersaFlex moldings in a relaxed position. Use construction or panel adhesive or mastic type glue continuously on back side and nails to secure molding material in place until adhesive bonds.

- **DO NOT** use staples to fasten material.
- Keep nails to a minimum, no closer than 6" between nails.
- Do not nail closer than 3/8" from edge of molding.

CLEANING: Prior to finishing, clean the molding by wiping with a cloth using soap and water, paint thinner or any mild solvent to clean any dirt or grease that may have accumulated during installation.

PAINT & STAINING: VersaFlex is paint grade and most profiles have grain and can be stained. Staining of VersaFlex requires the use of a gel type stain. Paint with latex or oil based paint.